

GENERAL

- Translation import CS, DE, ES, IT, PL, PT
- SWOOD Network 2025 available

SWOOD Design

- **SR – 5984 – Connectors:** Connector Library→Edit→Copy not working on unsaved elements
- **ER – 5917 – Connectors:** Add a confirmation before cancellation to the connector library
- **ER – 3303 – Edgebands:** Edgeband replacement: have filters depend of thickness, chamfer
- **SR – 5643 – Edgebands:** Edgeband overlength
- **SR – 5687 – Help:** Edgeband Library Help in wrong language
- **SR – 5908 – HOMAG productionManager:** Error in productionManager import route (API used)
- **SR – 5819 – Library Contents:** Description aren't Showing in Libraries
- **ER – 5404 – Library Contents:** Library→More control on tree with right click
- **SR – 5751 – Library Installer:** Panel Manager→Wrong highlight after rotating panels
- **SR – 5064 – Materials:** Texture is lost when using the SWOODBox created in the old version
- **SR – 5194 – Materials:** Texture lost problem
- **ER – 1546 – Materials:** Search/Filter in the extended properties
- **SR – 5826 – Materials:** Specific Files, Edgeband preview shifted
- **SR – 5867 – Materials:** Edgeband preview shifted – when panel reorientation
- **SR – 5959 – Panel Joint:** Panel cut feature description not updated if linked to another one
- **SR – 5892 – Panel Joint:** Panel joints feature are not in imperial units
- **SR – 5952 – Panel Joint:** Panel Cut→Crash when interacting with connectors
- **ER – 5935 – Panel Joint:** Tenon Mortaise improvement proposition
- **ER – 5121 – Panel Manager:** Reorient SW front view to SWOOD coordinate system
- **ER – 5132 – Panel Manager:** Add Cam Copy at the end of the process
- **SR – 5649 – Panels:** Assembly→Create new panel→naming error and failed insertion
- **SR – 5860 – Panels:** SolidWorks Language change Panel Template priority
- **SR – 5579 – PDM:** Performance issue when copying from PDM to PDM location
- **SR – 5684 – PDM:** Library Panel PDM Description
- **SR – 5749 – PDM:** F5 doesn't refresh Version Icon in library
- **ER – 5455 – Performance:** Performance improvement on SWOODBox and Layout suppression

- **ER - 5208 - SWOODBox:** Test mode→button to save the current values as default values
- **SR - 5879 - SWOODBox:** Sketch selection list item color changing in SWOODBox Machining Definition
- **SR - 5963 - SWOODBox:** Machinings→"Position" variable not affected properly
- **SR - 5535 - SWOODBox:** Context parameters not saved switching tab
- **ER - 5536 - SWOODBox:** "Thickness Context" default values should be different than zero

SWOOD CAM

- **SR - 5022 - 3D machinings:** View orientation not intuitive
- **SR - 5391 - 3D machinings:** Trajectory split into several multi-pass approaches
- **SR - 5757 - Agregates:** When copy an existing aggregate add the "copy" at the end of the name
- **ER - 4675 - Edgeband machining:** "Done before CNC" should be integrated in SD (edit edgeband)
- **SR - 4891 - Edgeband machining:** Edgeband encoder mills the edgeband done before CNC
- **SR - 4802 - Edgeband machining:** Done before CNC from SD doesn't work
- **SR - 5705 - Machinings:** Wall finishing for pockets is not done
- **SR - 5706 - Machinings:** Unexpected behavior of pockets walls finishing in Nesting
- **SR - 5820 - Machinings:** Clamex Operation - Top & Bottom
- **ER - 5800 - Machinings:** Add the Font EFICAD on the setup
- **SR - 5290 - Machinings:** Problem between approach speed and disengagement speed
- **SR - 5821 - Machinings:** Clamex with a milling tool is not working
- **SR - 5828 - Machinings:** Staydown contour: goes through the board
- **SR - 5829 - Machinings:** Auto contour: the tool does not go round certain nesting parts correctly
- **SR - 5845 - Machinings:** Automatic Clamex: not done when supposed to be
- **SR - 5775 - Machinings:** Z secu always return to a high value on rebuild (more than 600 mm) -> So out of limit
- **SR - 5941 - Machinings:** Clamex after Nesting doesn't Work
- **SR - 5966 - Machinings:** Squaring cycle - Excess machining on an open pocket or a rabbet
- **SR - 5836 - Machinings:** Uncomplete contour processing FACE5 after nesting
- **SR - 5767 - Machinings:** Angle Finishing Pocket Closed→Impossible to finish 90° angle with 90° Tool
- **SR - 5768 - Machinings:** Angle Finishing Pocket Closed→Wrong trajectory on inclined plane
- **SR - 5769 - Machinings:** Angle Finishing Pocket Closed→Some angles are ignored

- **SR – 5815 – Machinings:** Machinings link issue with TOOL list (interface)
- **ER – 5639 – Tool Synchro:** Import/update only the parameters that have been changed
- **SR – 2585 – Tool Synchro:** File reading not working
- **SR – 3038 – Tool Synchro:** Wrong depth / wrong tool
- **SR – 4505 – Tool Synchro:** The imported tool crosses the entire part over a distance of more than 2000 mm
- **ER – 3243 – Tool Synchro:** Maestro: Create numbers for Xilog
- **SR – 4850 – Tool Synchro:** Drill are not displayed in simulation
- **SR – 3821 – Tool Synchro:** Masterwood imported tool diameter (Ø) from LENGTHX1 column
- **SR – 4013 – Tool Synchro:** Maestro import not working with this file

SWOOD CAM Nesting

- **ER – 5576 – Automatic Nesting:** Nesting from CSV
- **SR – 5992 – Automatic Nesting:** If "open" in nesting windows then error
- **ER – 2347 – Machinings:** Nesting Sheet program Flip (Top & Bottom)
- **ER – 3144 – Machinings:** Have the possibility to filter the parts to be nested

SWOOD Report

- **SR – 5834 – Report:** Loss of variables during a manual nesting
- **SR – 4589 – Report:** NESTING_PARENT not always indicated
- **SR – 5778 – Report:** Issue with Division Character in Report Configurator
- **SR – 5851 – Report:** The division sign "/" is being rewritten as "\".
- **SR – 5868 – Report:** Sheet filter export PDF problem
- **SR – 5886 – Report:** Cutting Pattern – Wrong panel
- **SR – 5861 – Report:** Report generation on a specific file
- **SR – 5945 – Report:** Problem with the returned value of computed variable
- **SR – 5681 – Report:** Obtain thickness of cutting pattern boards in .json file export
- **SR – 5936 – Report:** Report Freeze on last item of the feature tree
- **SR – 5903 – Report:** Report stuck on part rebuild
- **SR – 5833 – Report:** BOM_ITEM is missing from the LOOPON in the report configuration window
- **SR – 5573 – Report:** Computed VAR cannot evaluate condition in child node PANEL or PAN_EBF
- **ER – 5633 – System Report:** Size of table images
- **SR – 5475 – System Report:** Machining cost too high
- **ER – 4883 – System Report:** Add an access to system report viewer in SOLIDWORKS
- **SR – 5680 – System Report:** Filter on column doesn't affect print view
- **ER – 5587 – System Report:** Compound Material Showing Layers
- **ER – 5331 – System Report:** Group By function

- **SR – 5595 – System Report:** The column width is not kept once view switching
- **ER – 5560 – System Report:** Export CSV/PDF name
- **SR – 5957 – System Report:** Tools and Panels variable are empty in the program line
- **ER – 5571 – System Report:** Add and remove the sub-category in the summary sheet
- **ER – 5544 – System Report:** Access to System report on a server for multiple people
- **SR – 5950 – System Report:** Long variable names bad display

SWOOD Center

- **SR – 4624 – Configuration:** Sorting/Categories

MISCELLANEOUS

- **ER – 5634 – SWOOD Rx:** System Report – Save settings for SWOOD Rx import
- **SR – 5882 – Post-Processor:** Woodwop post-encoder: add ANSI format to display Chinese characters
- **SR – 4782 – Post-Processor:** Square value doesn't work in Post Pro Generator
- **SR – 5598 – Post-Processor:** FNISHING ENABLE doesn't works
- **SR – 3761 – SWOOD License Activation:** Nesting license: Have a clear message if no license
- **SR – 5906 – SWOOD License Activation:** SWOOD Addin – Complement available even if deactivated

SWOOD 2025 SP0.1 – Release notes

GENERAL

- SWOOD CAM Help integration

SWOOD CAM

- **SR – 6039 – Machinings:** Angle finishing is not working for internal contour

SWOOD Report

- **SR – 6044 – System Report:** Specific data for nesting boards is missing
- **SR – 6037 – System Report:** In the Summary, quantity doesn't affect total Sum for length